

WIRELESS. 
ALARM FAMILY

SMOKE ALARM

Optical smoke alarm device
Commercial reference: 2103-003

The smoke alarm is designed for private homes, camping trailers, mobile homes and caravans. It is not recommended for boats.

**PLEASE READ THE USER GUIDE
CAREFULLY BEFORE INSTALLATION AND
RETAIN FOR FUTURE USE.**

TECHNICAL INFORMATION

The maximum number of alarms that can be inter-linked within a house group are 32.

Please note: These must be alarms from Orisec.

The distance between interlinked alarms depends on the house layout and they should always be tested after installation. It is not advised to get more than 10m distance between two smoke alarms.

Diameter: 65mm. Height: 44mm

The alarm is powered by a replaceable 3v CR123A lithium battery. Please note that correct operation of the smoke alarm device is ensured by use of one of the following batteries: DURACELL, PANASONIC or HUIDERUI.


In normal situations, minimum battery life is 5 years, but severe RF interferences may affect battery life of your device.

Interlinked by RF: 868 MHz

Complies to standards: EN14604:2005 + AC:2008, EN300-220.




1. HOW TO SET UP AND CONNECT ALARMS:
Start by pulling out the battery isolation strip as shown.

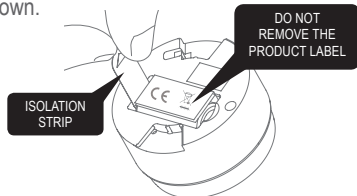

Please note: The product label must not be removed as it contains important information regarding the product.

All alarms that need to be connected in the house should be put into 'Learn Mode' by sliding the switch on the back of the alarm to the 'Learn Mode' position.

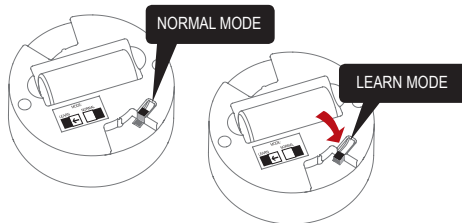

The red LED will light up to indicate that 'Learn Mode' has been selected.



Please note that when the alarms are placed in 'Learn Mode' they can't be inserted into the mounting base.

Do not take out the battery during 'Learn Mode' as this will interrupt the learn process.

Press and hold the test button at one alarm only, until it beeps and the LED flashes. This alarm will become the master and will start sending out a specific house code to the other alarms.



As the other alarms receive the specific house code, they will also flash the LED light.




When all alarms flash the red LED, they are connected and can be switched out of 'Learn Mode' and installed.

2. THE BEST AREAS TO INSTALL THE SMOKE ALARM:

- Install an alarm between possible fire sources and bedrooms as a minimum.
- Install alarms on each floor of the house, in hallways and stairways.
- Alarms in each room such as bed rooms and living rooms.

Additional alarms increase the security.

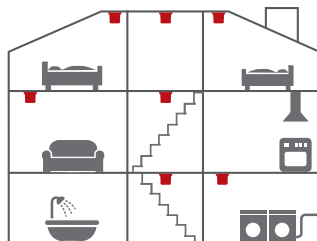

■ Minimum

3. AREAS WHERE NOT TO INSTALL SMOKE-ALARMS:

- In dusty rooms.
- At the top of a high pointed ceiling, in ceiling corners, and within 50cm of a wall.
- In rooms where the temperature goes outside +4° to 38°C or above 90% relative humidity not condensing.
- In kitchens, garages, laundries, or too close to fireplaces; areas where either dampness, gases or smoke could occur.

 
Place the alarm where it is reachable in order to test the battery and for maintenance.

4. PLACEMENT:


The smoke alarm is designed to be installed on a ceiling or wall.

For ceiling installation:

The smoke alarm should be a minimum of 50cm from the wall.




For cathedral or peak ceiling or wall installation:

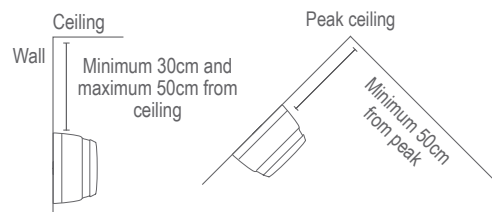


With a minimum of one smoke alarm per floor and a maximum distance between smoke alarms of 10 meters.

5. INSTALLING THE SMOKE ALARM:

Detach the alarm from the mounting base by twisting counter clockwise.

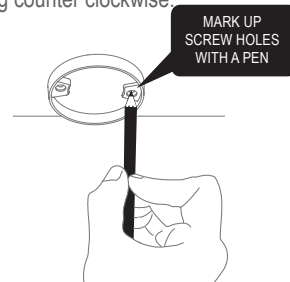

Use the mounting base ring to mark the screw holes on the ceiling or the wall.

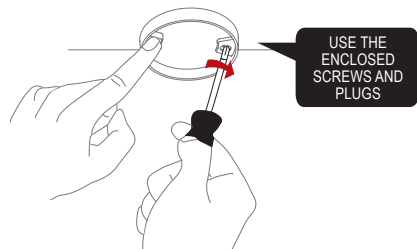

Once the mounting base is installed, attach the alarm by twisting clockwise until it clicks. If the battery is either missing or inserted incorrectly, or the switch is in 'Learn Mode', the smoke alarm will not be able to click into the mounting base.



6. TEST FUNCTION:

After installation, and at least once per quarter, test all of your alarms to ensure they are operating correctly and are within range of each other.

It is recommended to check visually every week if the LED flashes correctly (every 48sec.)

Press the test button on any alarm for at least 10 seconds. This will send out a test signal from the alarm; all other connected alarms should receive the signal within a short time. The alarms will emit a short beep and the LED will flash every 8 seconds for 2 minutes.

NOTE: Test function also allows to send a depleted RF signal to ensure an optimal operation in normal conditions.

When the test signal is sent out, the alarms will respond in two ways:

1. A single beep every 8 seconds indicates that the alarms are connected and functioning.

2. Three short beeps every 8 seconds indicates a smoke sensor fault. The alarm should be cleaned by running the vacuum (on a low setting) around the smoke alarm chamber and tested again.

If required this indication can be stopped early on each alarm by a short press of the test button.

TIP: It is safe to cover the sound output hole with your finger during the testing to minimize the sound level emitted.

7. NORMAL MODE:

In normal mode the LED will flash every 48 seconds to show correct operation.

8. ALARM MODE:

When a concentration of smoke is detected, the smoke alarm will go into 'Alarm Mode'. It will sound the alarm signal and the LED will flash.

The smoke alarm will also transmit the alarm signal to the other connected alarms, which will also sound the alarm signal after a short delay.

The smoke detector have two different alarm signals:

Alarm signal 1 (--- --- ---) is life threatening alarms, like a smoke alarm.

Alarm signal 2 (- - -) is a non life threatening alarm, like a flooding alarm:

Smoke alarm signal: --- --- ---

Heat alarm signal: --- --- ---

Flood alarm signal: - - -

CO alarm low level signal: - - -

CO alarm high level signal: --- --- ---

Please note that only the originating alarm's LED will flash, so it can be identified.


9. PAUSE/HUSH FUNCTION:

If the smoke alarms are to set into a false alarm by cooking, fireplace, etc. they can be paused for 10 minutes by pressing the test button on the originating smoke alarm only (indicated by the flashing LED).

The reason of this is that it is necessary to locate the source of the alarm before using the hush function. This is to make sure that it is not a life threatening situation.

10. ADD EXTRA DEVICE:

WIRELESS ALARM FAMILY

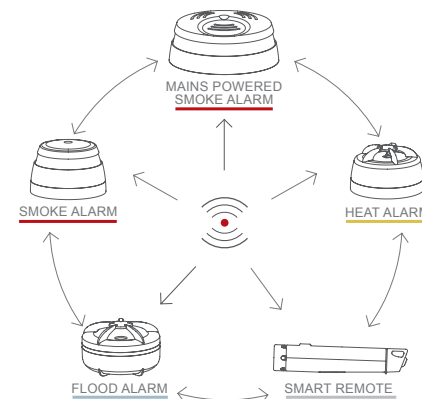

All Orisec Fire / Flood alarms within the can be added to the system as

they run on the same frequency and use the same data protocol. This means that the wireless system can consist of a combination of smoke, heat, flood etc.

Place all alarms into 'Learn Mode' and repeat section 1.

Always test connection to all devices by repeating test function section 6 after adding devices.

11. LOW BATTERY SIGNAL:

Your product has a 5Y battery life.

When the battery is starting its end of life, a short beep will sound out every 48 seconds for 30 days.

The alarm affected by the low battery will only beep, no other connected alarms will sound.


It is safe to change batteries in the alarms without going through the learn process again – they will not forget the codes during the battery change process.

12. BATTERY REPLACEMENT:

To replace the battery, detach the smoke alarm from the mounting base by twisting counterclockwise. Replace the battery respecting the polarities.

Caution: There is a risk of explosion if the batteries are replaced by an incorrect type.

Attach the alarm in the mounting base by twisting clockwise until it clicks, and test the alarm.

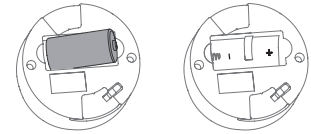

13. MAINTENANCE & TROUBLE SHOOTING:

- The smoke alarm should be vacuum cleaned once per quarter, to remove dust particles, and it can be wiped with a damp cloth. (Do not open the alarm).

- High humidity condensing which can be resolved by drying the smoke alarm.

If the smoke alarm does not work when the test button is pushed, the probable cause is a faulty battery. Check if the battery is worn out and replace it. **Always test the alarm after replacement of battery.**

14. OTHER INFORMATION:

Do not paint the alarm.

Note the local country regulations regarding installation.

Disposal: For battery and product, please dispose properly at the end of life. This is electronic waste which should be recycled.

Please note local regulations about information to your insurance company regarding installed smoke alarms.

The CE mark affixed to this product confirms its compliance with the European Directives which apply to the product and, in particular, its compliance with the harmonized specifications of standard EN 14604 relating to Construction Products Regulation 305/2011.



NS119