

Akuvox Manual - Basic

C313S / C313W - V2.0

1 Introduction

2 Hardware Part

3 Firmware Part

4 Wiring Specificities



Introduction

Details

- **Linux**
- **7" Touch Screen**
- **800 * 480 Resolution**
- **Support WiFi**
- **8 Channel Inputs and 1 Embedded Relay**

Overview






Hardware Part

Overview

Back

Rear View

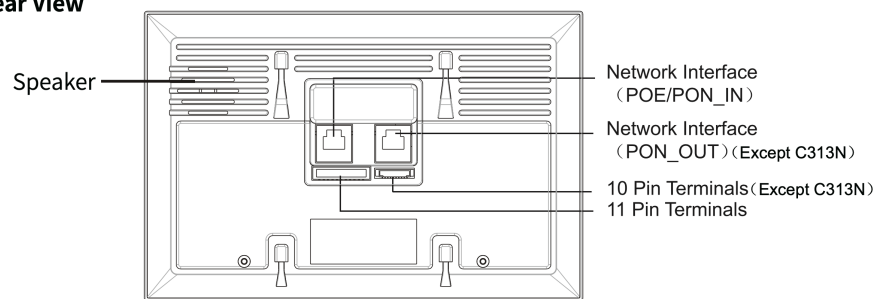

NOTE: C313N does not have PON_OUT Interface.

Front





Firmware Part

Basic One: Network

Details

- **Step One:** Check the network status on the web interface in the Module of **Status**.
- **Step Two:** Choose the DHCP or Static IP mode to sure the IP of the devices in the Module of **Network > Basic**.
- **Noted:** **DHCP** is the default network connection mode, which automatically ask the network parameters from the network to the devices. **Static IP** Mode is which mode you could set the network parameters manually.

Overview

Network Information			
Network Type	WLAN	LAN Port Type	Static IP
LAN Link Status	Connected	LAN IP Address	192.168.1.104
LAN Subnet Mask	255.255.255.0	LAN Gateway	192.168.1.1
LAN DNS1	192.168.13.9	LAN DNS2	218.85.157.99
Primary NTP	0.pool.ntp.org	Secondary NTP	1.pool.ntp.org

LAN Port			
☐ DHCP		☒ Static IP	
IP Address	172.18.200.100	Subnet Mask	255.255.255.0
Default Gateway	172.18.200.1	LAN DNS1	8.8.8.8
LAN DNS2	8.8.8.8		

Basic Two: SIP Account

Details

- **Step One:** Check the SIP account information on the web interface in the Module of **Account > Basic**.
- **Step Two:** Check the SIP account parameters.

Overview

SIP Account

Status	Disabled	Account	Account 1
Account Active	Disabled	Display Label	
Display Name		Register Name	
User Name		Password	

SIP Server 1

Server IP		Port	5060
Registration Period	1800	(30~65535s)	

Basic Three: Contact list

Details

- **Step One:** Check the Module of **Contacts > Local Contacts**.
- **Step Two:** Enter the IP / SIP number of the devices and end with different account.
- **Noted:** Enter the IP / SIP number of the Doorphone to the Indoor monitor. And Enter the IP / SIP number of the Indoor monitor to the Doorphone to make sure devices are in the contacts with each other.

Overview

Contacts List Setting

Contacts Sort By Default Show Local Contacts... Disabled

Local Contacts List

Contact All Contacts

Search Search Reset

Dial Auto Dial Hang Up

☐ Index	Name	Number 1	Number 2	Group	Ring	Account
☐ 1						
☐ 2						
☐ 3						
☐ 4						
☐ 5						

Basic Four: Relay

Details

- **Step One:** Check the Module of **Phone > Relay**.
- **Noted One:** Local Relay is on Indoor monitor. Remote Relay is on the Door phone. DTMF only for calling. And HTTP for calling and monitoring.
- **Noted Two:** HTTP URL to open the door such as below:
HTTP URL with username and password: `http://username:password@The IP of devices /fcgi/OpenDoor?action=OpenDoor&DoorNum=1`
HTTP URL without username and password: `http://The IP of devices /fcgi/OpenDoor?action=OpenDoor&DoorNum=1`
- **Noted Three:** DoorNum for Relay on Door phone that 1=Relay A, 2=Relay B. DoorNum for Relay on Indoor monitor that 0=RelayA

Overview

Local Relay
DTMF
Relay Interval Relay Type
Remote Relay
DTMF
DTMF Code1

Remote Relay By HTTP

Index	IP/SIP	URL	UserName
☐ 1	IP of Devices in Calling		admin

Softkey In Talking Page

Key	Status	Label	Type
Key1	Enabled		Remote Relay By D..

Basic Five: RTSP--Monitor

Details

- **Step One:** Check the Module of **Phone > RTSP**.
- **Step Two:** Check the RTSP parameters.
- **Noted One:** Rtp Stream of Akuvox Doorphone: **rtsp://IP of Camera/live/ch00_0**
- **Noted Two:** If the 3rd party Camera is considered when calling to show on the Indoor monitor that the RTSP stream could be replaced to the 3rd party one. Then enable the Display in Call.

Overview

Door Phone

☐	Index	Number	Name	URL	User Name	Display
		IP of Devices				
☐	1	who is in Calli	Outdoor Unit	rtsp://IP of Camera/live/ch00_0	admin	Enabled
		ng				
☐	2	192.168.1.100	X912-Outdoor	rtsp://192.168.1.100/live/ch00_0	admin	Enabled

Device Number

Device Name

RTSP Address

User Name

Password

.....

Display in Call

Disabled ▼

+ Add


Edit

✕ Cancel



4 Wiring Specificities

Application Network Topology

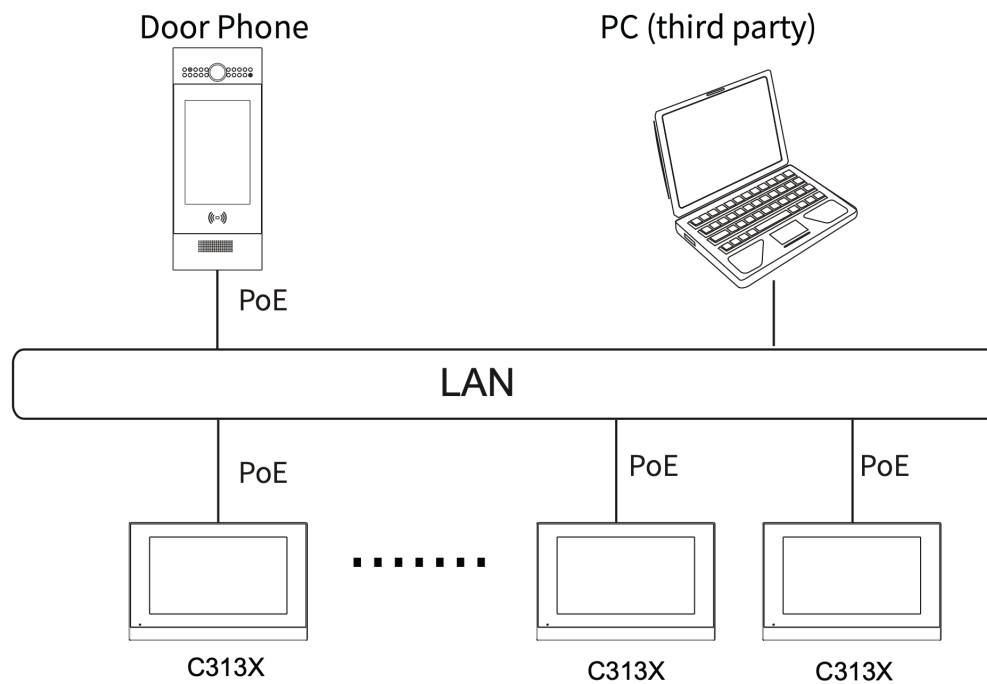

NOTE: C313N does not have PON_OUT Interface.

- Need further support from Tech Team:
support@akuvox.com
- Get a Quote from Sales Team:
sales@akuvox.com
- Akuvox Training & Certification System
<http://learning.akuvox.com>
- Akuvox Community with Idea & Technology Sharing
<http://community.akuvox.com>
- Akuvox Knowledge Base with more guides and docs
<https://Knowledge.akuvox.com>



THANK YOU

FOR WATCHING

- INNOVATION
- SERVICE
- QUALITY