

Unpacking

Before you begin using the device, please check the version you got and ensure that the following items are included in the shipped box:



X933 X 1



Flush-mounting bracket X 1



 
M4x10 crosshead screw X 4



11-Pin cable X 1




10-Pin cable X 1




Diode X 2

Product Overview

 
Top View




Front View

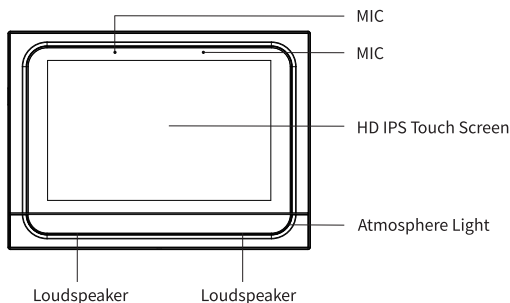

Back View

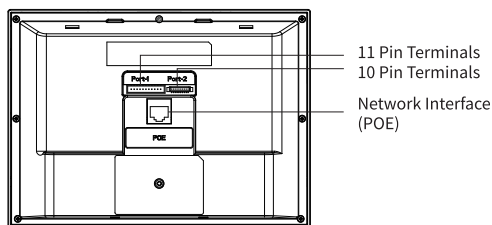


Bottom View

 


Installation


Step 1: Flush-mounting Box Installation

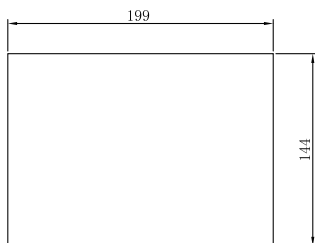

According to the position of the cable in the wall, dig out a square hole (height*width*depth=144*199*50 mm) that can accommodate all cables.

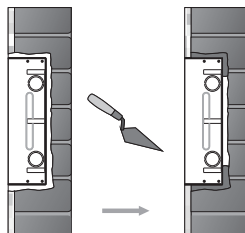


Place flush-mounting box into the hole. Then fill the gap between the wall and flush-mounting box with cement or adhesive. Wait for the adhesive material to get dry, and move onto the next step.

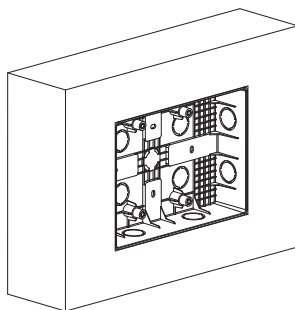


The flush-mounting box installation is completed.


Step 2: Device Mounting

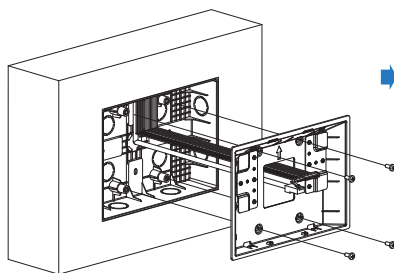


Make sure all cables pass through the flush-mounting bracket. Then use four M4x10 crosshead screws to fix the flush-mounting bracket on the flush-mounting box. (Note: the arrow of the flush-mounting bracket faces upwards.)

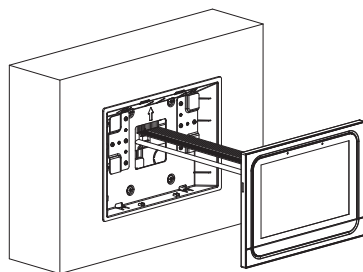

Connect all cables to the device.

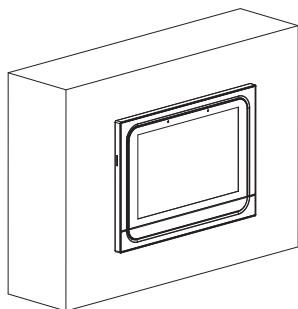

The installation is completed.


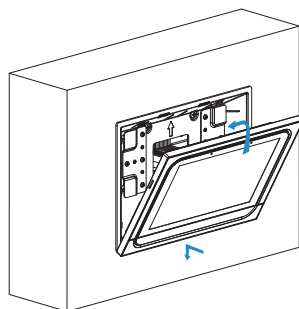


Push the bottom of the device onto the flush-mounting bracket, then push the top of the device against the flush-mounting bracket. (Note: it is magnetically mounted, so when the device reaches a certain position, there will be a sense of magnetic suction.)

Device Wiring

Warning

 When you connect a device containing a coil, such as a relay or an electromagnetic lock, it is necessary to protect the intercom against voltage peak while switching of the induction load. For this way of protection we recommend a diode 1 A / 200 V (included in the accessories) connected antiparallel to the device.

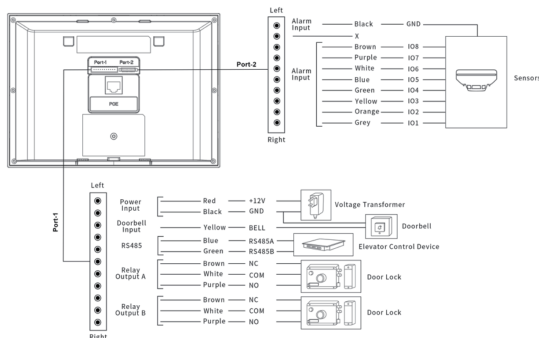

Configuration

1. Access basic information: After setting up network and power, swipe left on the home screen and press **Setting** icon to go to **System Info** where you can check for Account, Network, version status etc.
2. Access the web interface: Enter the device IP address in a browser and press **"Enter"**, then enter the user name and password to log in the device web interface. (the user name and password are all **"admin"** by default in your initial login)
3. Account Registration: On web Interface, go to the path: **Account -> Basic** page to fill in the account information, click **Submit** tab for the confirmation. (Please refer to user manual for more information)

Operation

Make a call:

Enter the callee's number, then press **Dial** icon to make a audio call or press video camera icon to make a video call. Press icon to hang up.

Receive a call:

Press icon to pick up the incoming call in video mode or press icon to pick up the call in audio mode.

Unlock:

During the talk, you can press the **Unlock** icon on the talking screen to unlock the door.

Monitor:

Press the **Monitor** icon to receive the video from the door phone or from third-party devices.

Notice Information



Akuvox X933 firmware contains third-party open source software under the terms of the GNU General Public License (GPL). Akuvox is committed to meeting the requirements of the GNU General Public License (GPL) and will make all required source code available. The source code of software under the terms of GNU GPL can be downloaded online, <http://www.akuvox.com/gpl>. Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox' s website: <http://www.akuvox.com> © Copyright 2022 Akuvox Ltd. All rights reserved.

AKUVOX (XIAMEN) NETWORKS CO., LTD.

ADD: 10/F, NO.56 GUANRI ROAD, SOFTWARE PARK II, XIAMEN 361009, CHINA
www.akuvox.com



YS93300005