


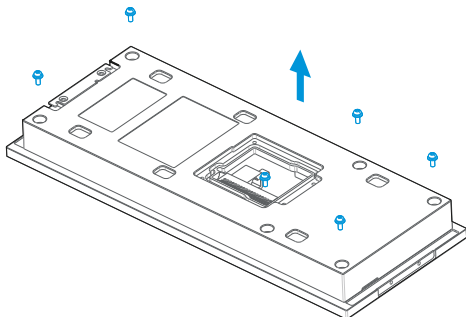



Packing List

| | | | | | |
|--|----------------|---|-----------------|---|--------------|
|  | LTE Module x 1 |  | Rubber Plug x 1 |  | Tweezers x 1 |
|--|----------------|---|-----------------|---|--------------|

1. R29 LTE Module Installation




Remove the six screws (M3x8) on the device's rear cover using cross screwdriver and keep the screws.

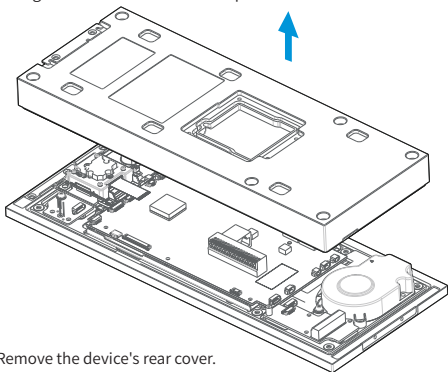


Remove the device's rear cover.




Warning: Do not open the rear cover when the SIM card is installed otherwise it might cause the damage to the device.

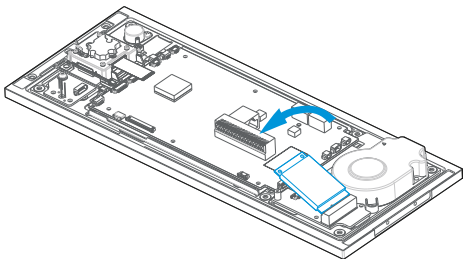

Insert the LTE module connecting fingers into the interface as indicated in the drawing and press down the other end of module to line up the left screw hole with the lower screw column.

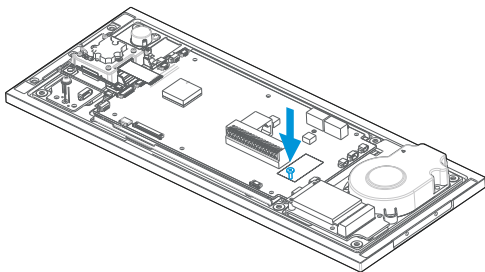


Lock the module on to the screw column of the device with the screws (M2x5).

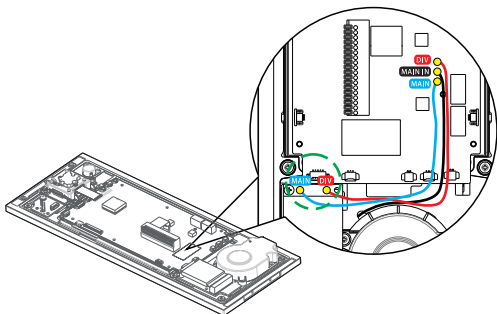


Connect the main RF cable and the div RF cable to the module as indicated in the dotted green circle. While the other ends of the two cables are already connected to the main-board.

Notice: The two cables are distinguished by the labels attached.

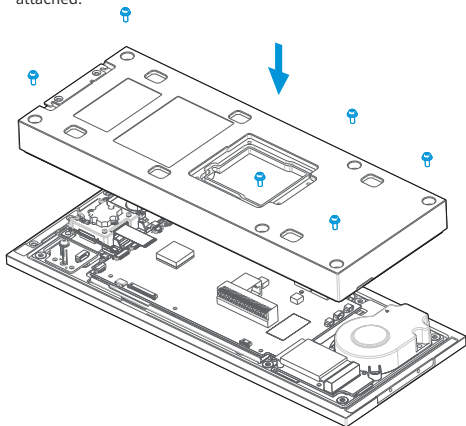


Put the rear cover to the device and tighten the cover using the six screws (M3x9) that are previously removed.


2.1 R29 LTE SIM Card Installation

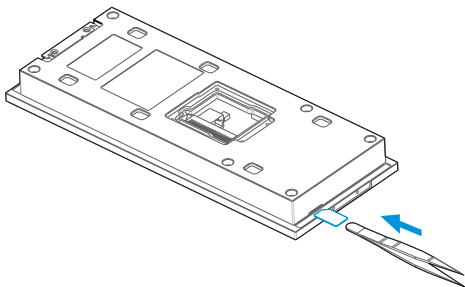


Insert the SIM card to the card slot at the bottom and push the card all the way in using the back end of the tweezers attached with the module until you hear a clattering sound.

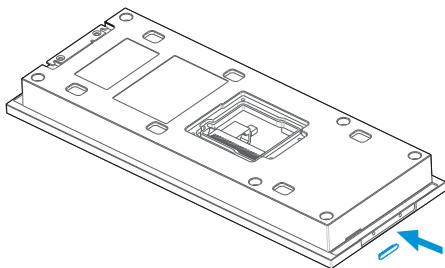


Plug the SIM card slot using the silicone plug attached.

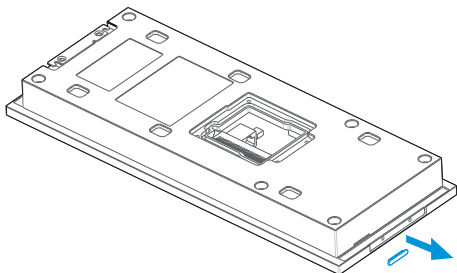

Remove the SIM card rubber plug at the bottom of the device.

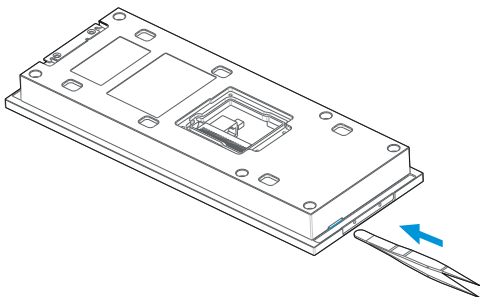

Push the card against the slot base using the back end of the tweezers until you hear a clattering sound when the SIM card will be pushed out.

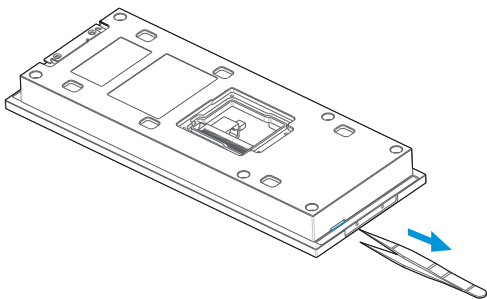

Take out the SIM card from the slot using the tweezers tips.

Notice Information

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox' s website: <http://www.akuvox.com> © Copyright 2020 Akuvox Ltd. All rights reserved.



AKUVOX (XIAMEN) NETWORKS CO., LTD.
ADD: 10/F, NO.56 GUANRI ROAD, SOFTWARE PARK II, XIAMEN 361009, CHINA
www.akuvox.com