

Parapet Mount


SBP-156LMW
SBP-156LMW1





Installation Precautions

- Make sure that the installation place can endure at least 4 times of the total weight of the Parapet Mount and Camera.
- This product is designed to use M8 Anchor Bolts (Nuts) for the installation.
- Each anchor bolt must be capable of withstanding an extraction force of 700 kg.
- When installing the product outdoors, use interlocking devices made of stainless steel.


Installation

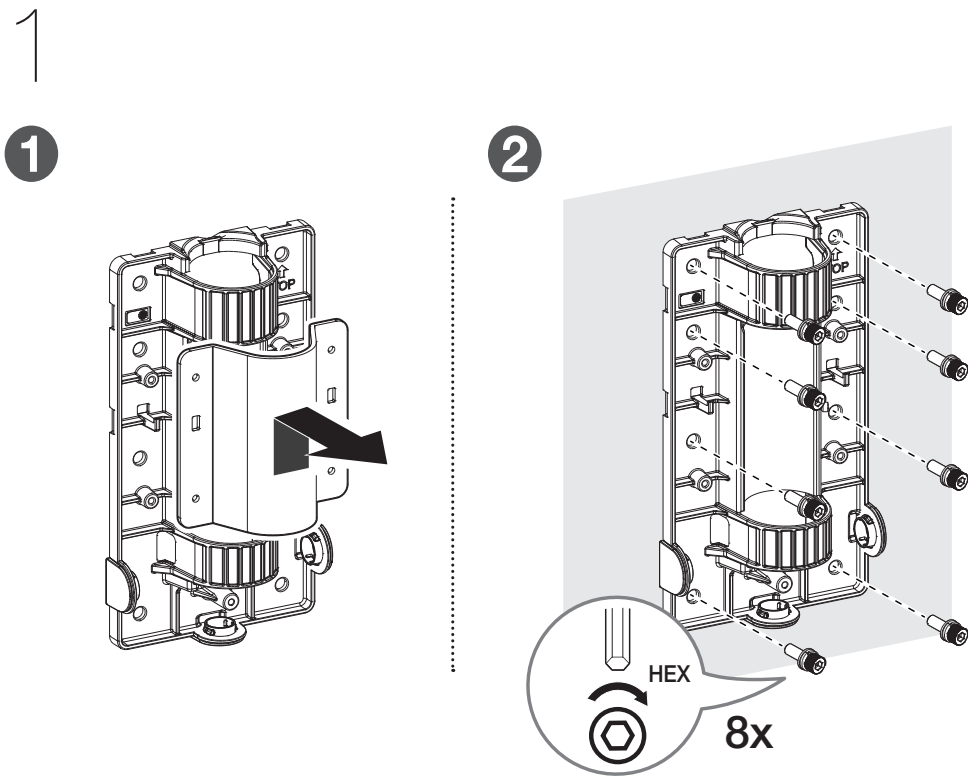

Package

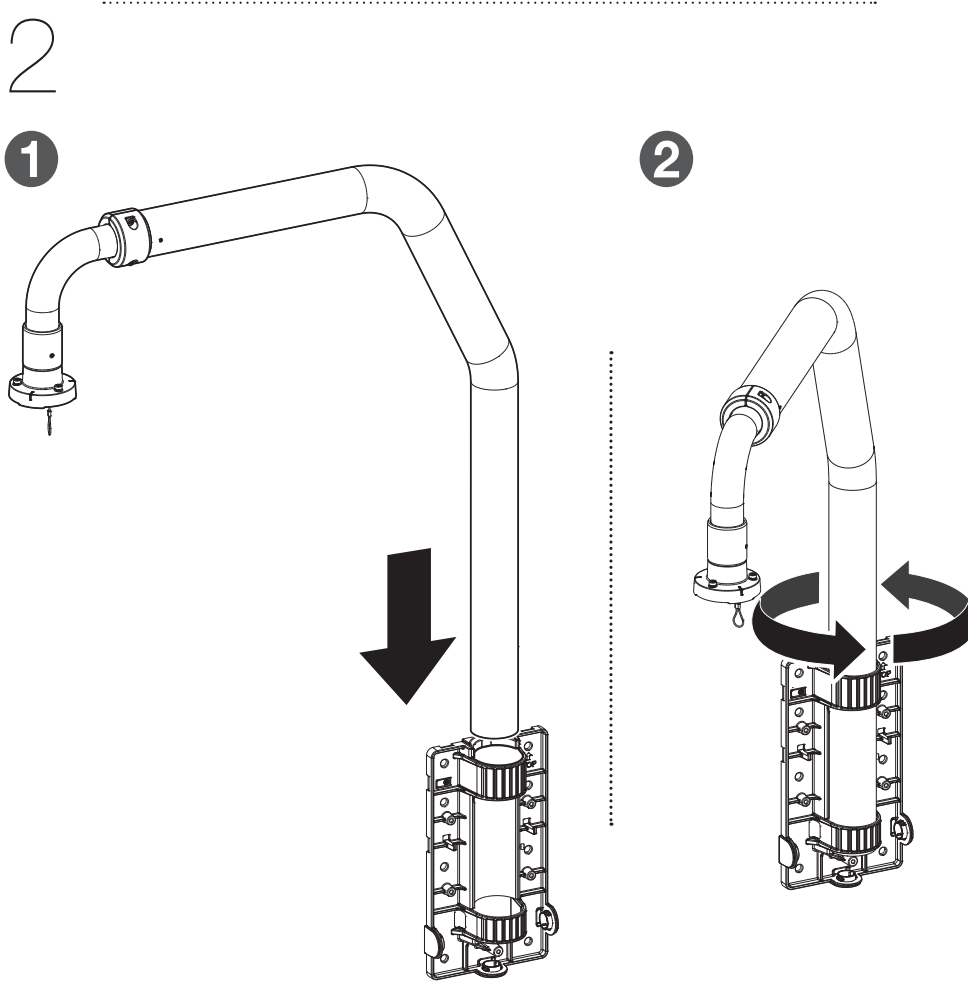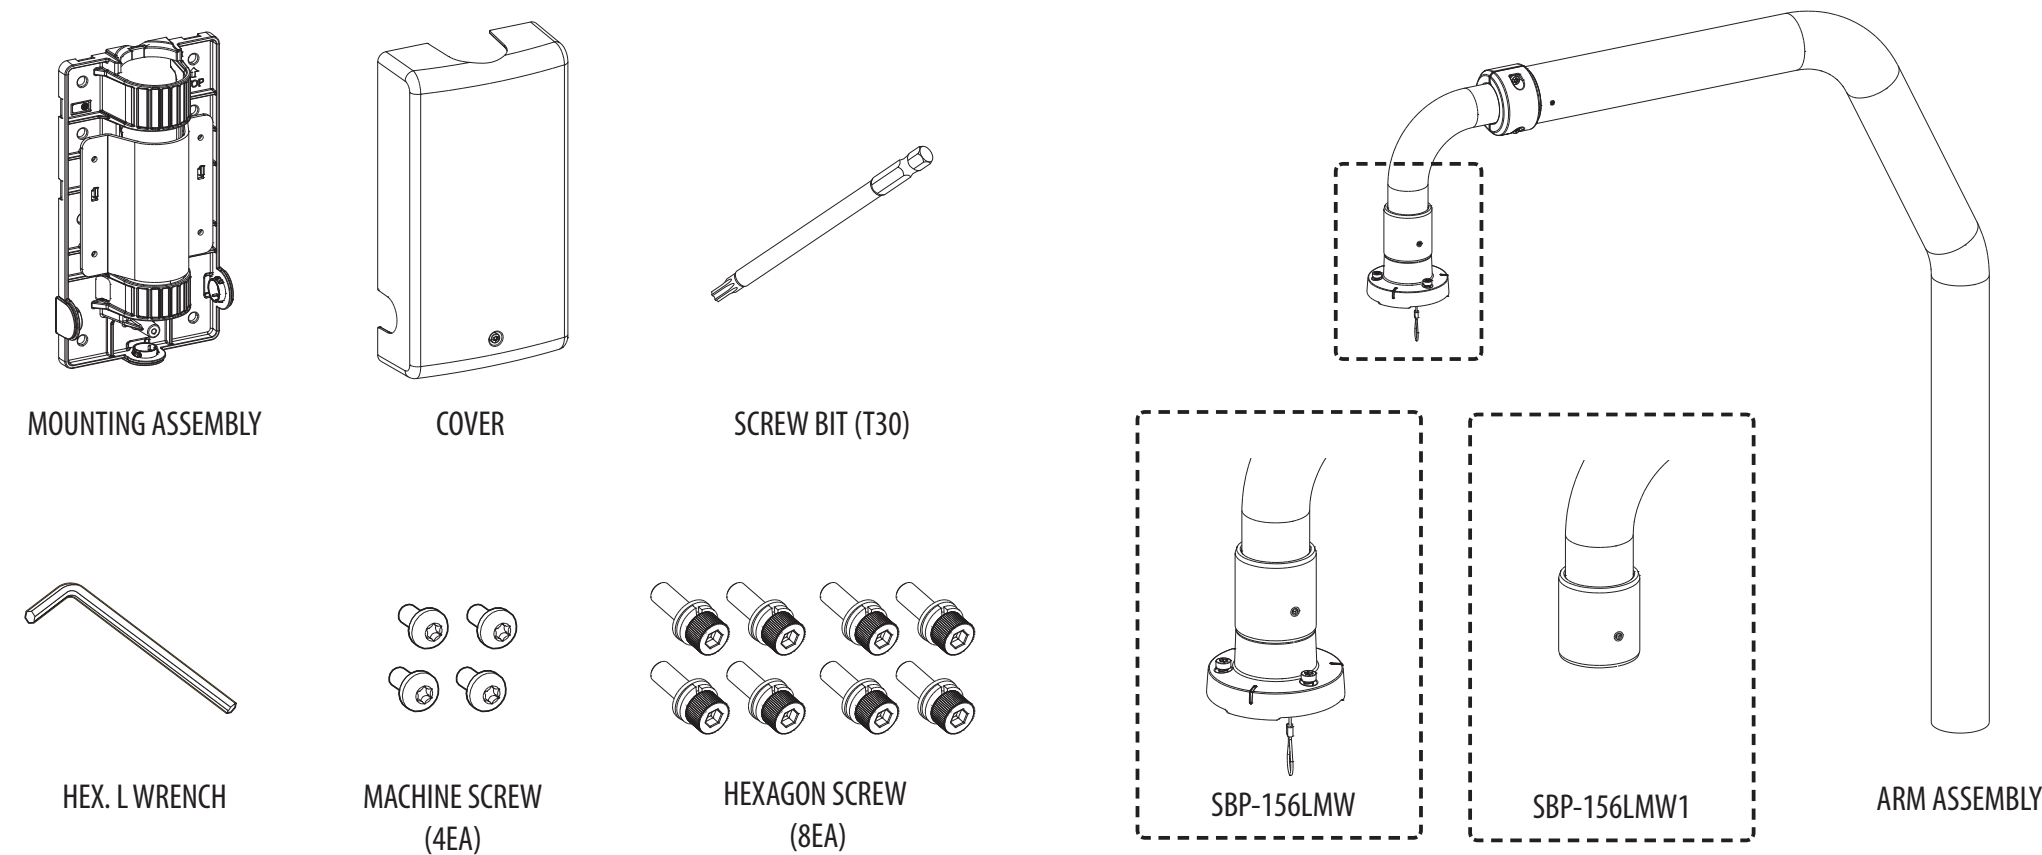


3

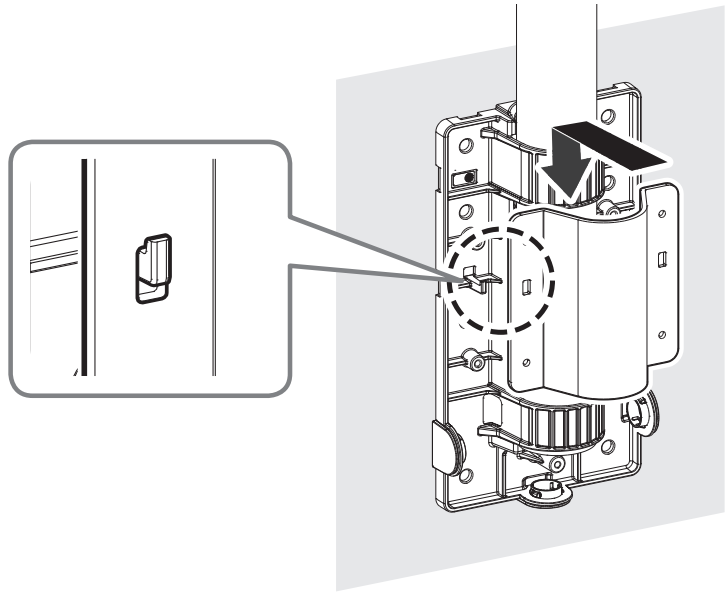


4


1

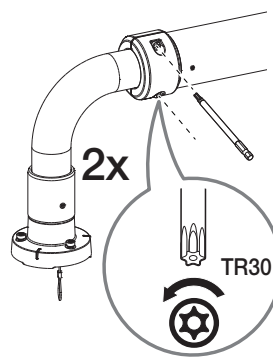

2

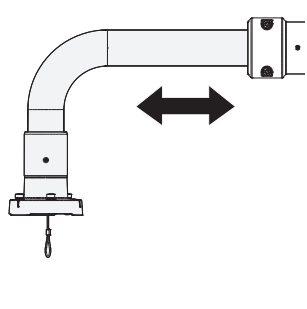


3

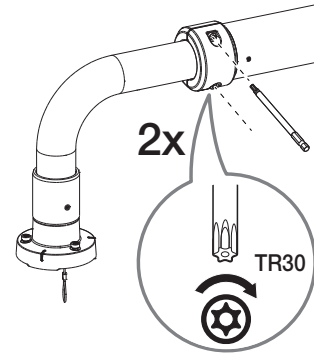


5

1

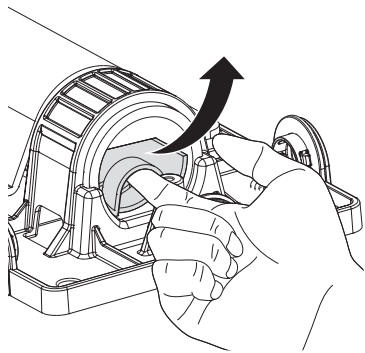


2

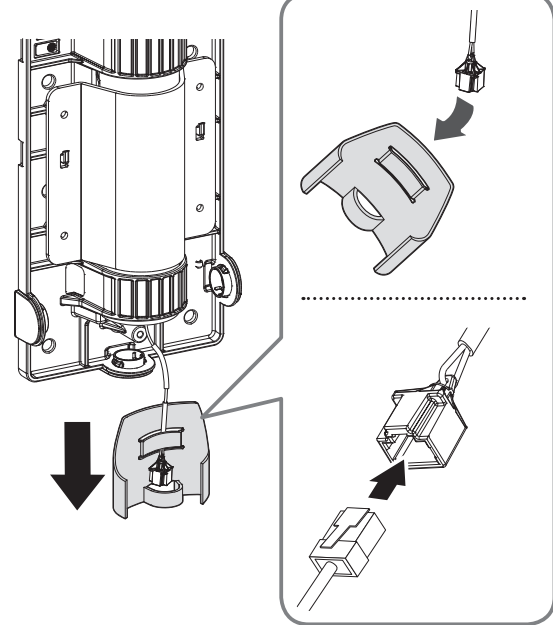


6

1

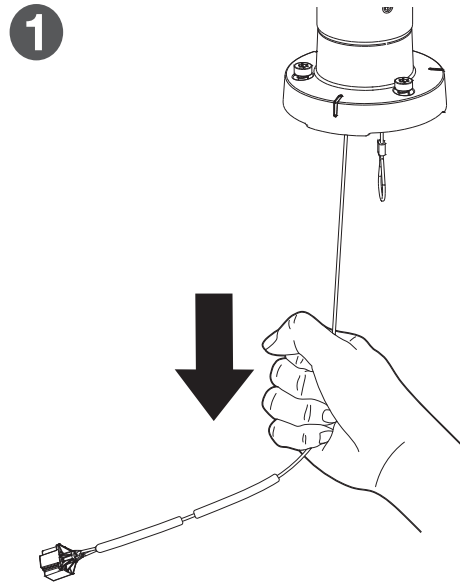


2

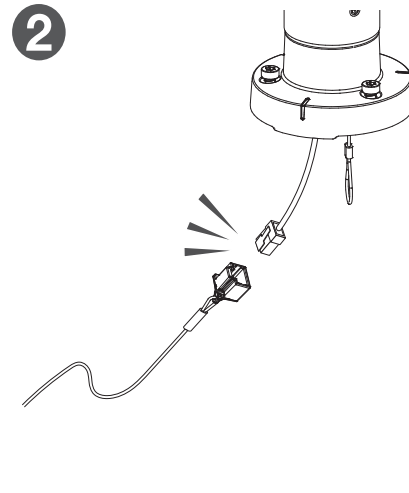


7-A

SBP-156LMW

1

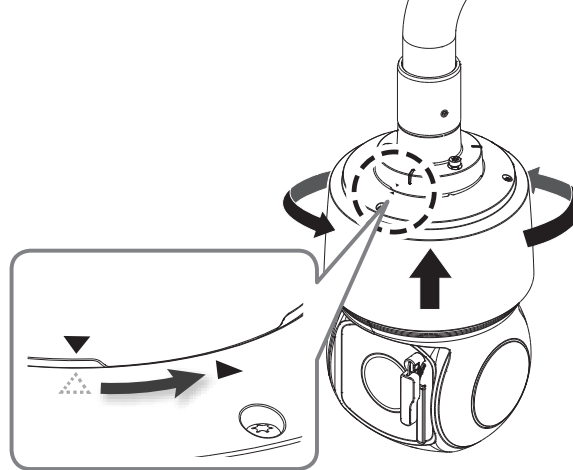


2

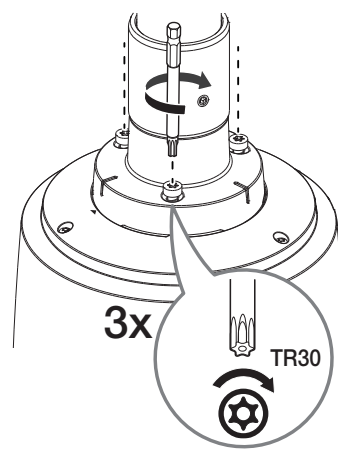


7-B

SBP-156LMW1

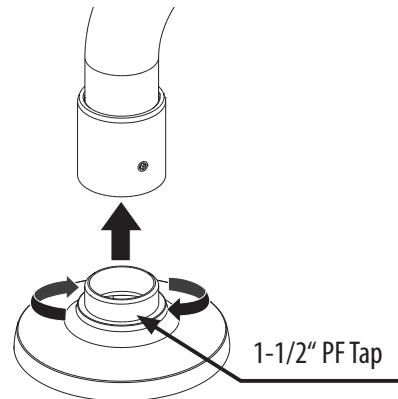

8-A

SBP-156LMW

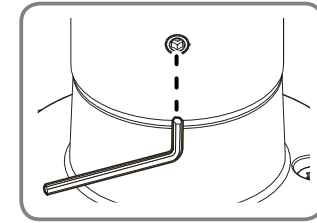


1x



8-B



SBP-156LMW1

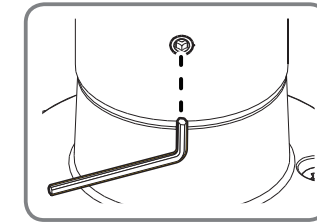

1x




9

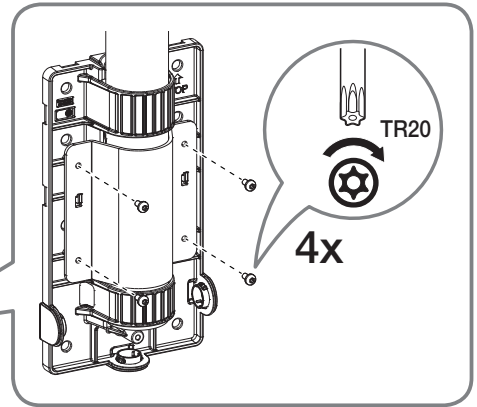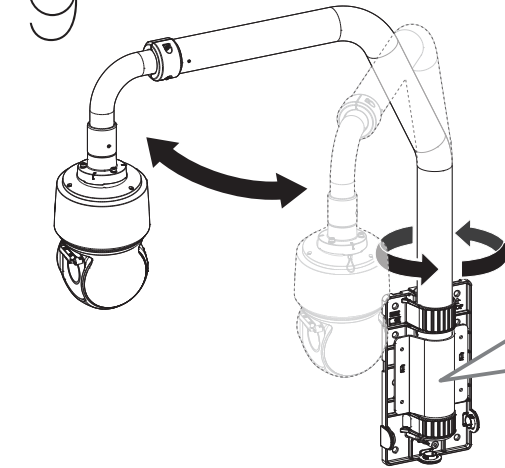

4x

10

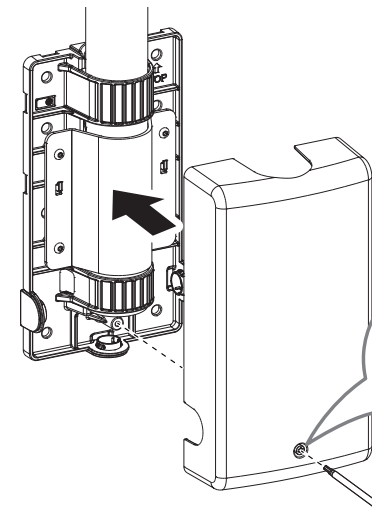

1x