



Akuvox E18 Rain Cover

Installation Guide


In-wall Installation

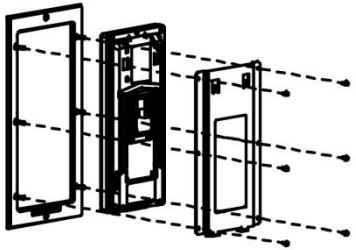


As shown in the picture, combine **bracket, device, and plate** together. Secure them by fixing six **M3X8 crosshead screws**.

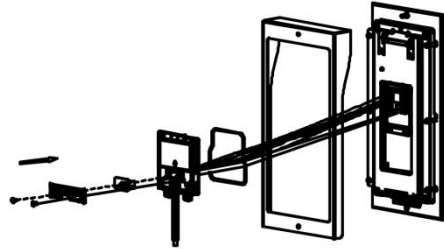

- Lead the wires from the **flush-mounting box** through the **plate, rain cover, wiring cover, and sealing ring**.
- Connect wires to the corresponding interface as needed (for details, refer to "**Wiring Interface**").
- Put **sealing ring** into the groove, close **wiring cover**. Then select a suitable **rubber plug** to push all the cables into the **wiring cover**.
- Fix **wiring cover** on the back cover with four **M3X5 crosshead screws**. Then use two **ST1.7X4 crosshead screws** to tighten **sealing pressing plate**.

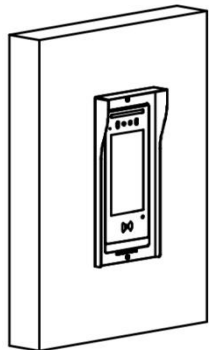

Installation is completed.

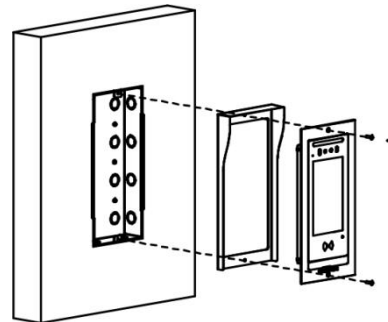

- Combine the device, its components, and rain cover.
- Align the fixing holes of flush-mounting bracket with the one on rain cover.
- Secure them together on the flush-mounting box with two **M4X16 crosshead screws**.