



Supplementary Instructions for X912 Installation

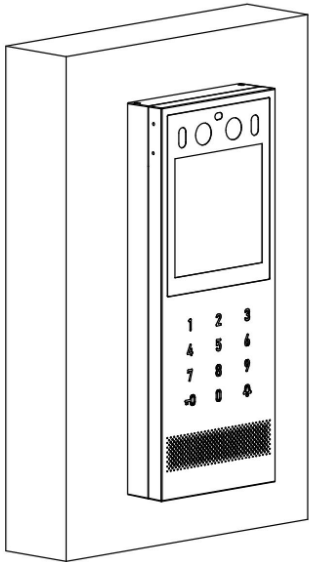


After pushing the device down into the bracket, you will hear a “click” sound, which means the installation is complete, and now you cannot push up the device. If you do not hear a “click” sound, that means the installation is incomplete and you can push up the device. If the installation is incomplete, please do the following steps.

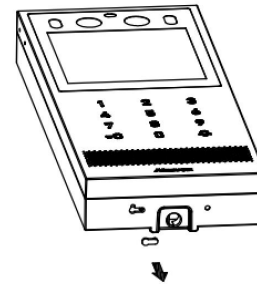


Please take off the silicone plug at the bottom of the device.




Akuvox X912

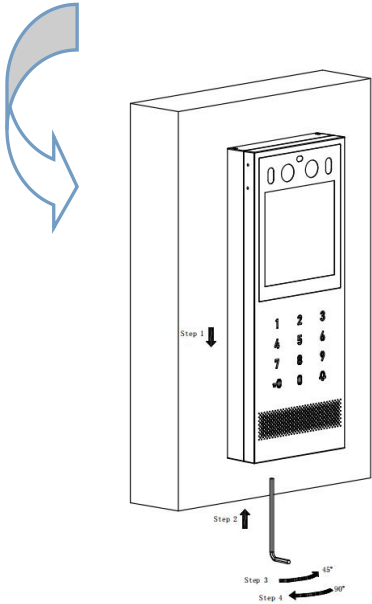

Put the device into the bracket and push it down, then insert Allen wrench into the bottom of the device, and turn the wrench 45-degree clockwise. After that, push down the device all the way, then turn the Allen wrench 90-degree counterclockwise.

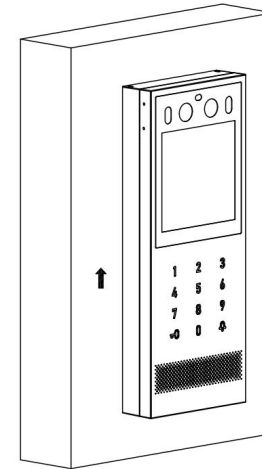

Push the device upward to check if the installation is complete. If the device still moves, please repeat the above steps.

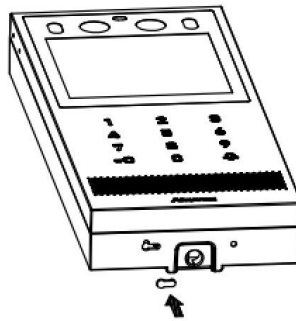

Place the silicone plug into the bottom of the device.